


Stock No.
33166

To make assembly easier we recommend having two persons aid one another in assembly.


Item	Description	Quantity
1	Top Panel	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Left Back Panel	1
6	Right Back Panel	1
7	Left Door	1
8	Right Door	1
9	Front Kick Panel	1
10	Side Kick Panel	2
11	Shelf Panel	4
12	Foot Holder	4
13	Leg Leveller	4
14	M8 x 16mm bolt	16
15	M6 x 16mm bolt	12
16	12 x 7 x 5mm Flat Washer	1

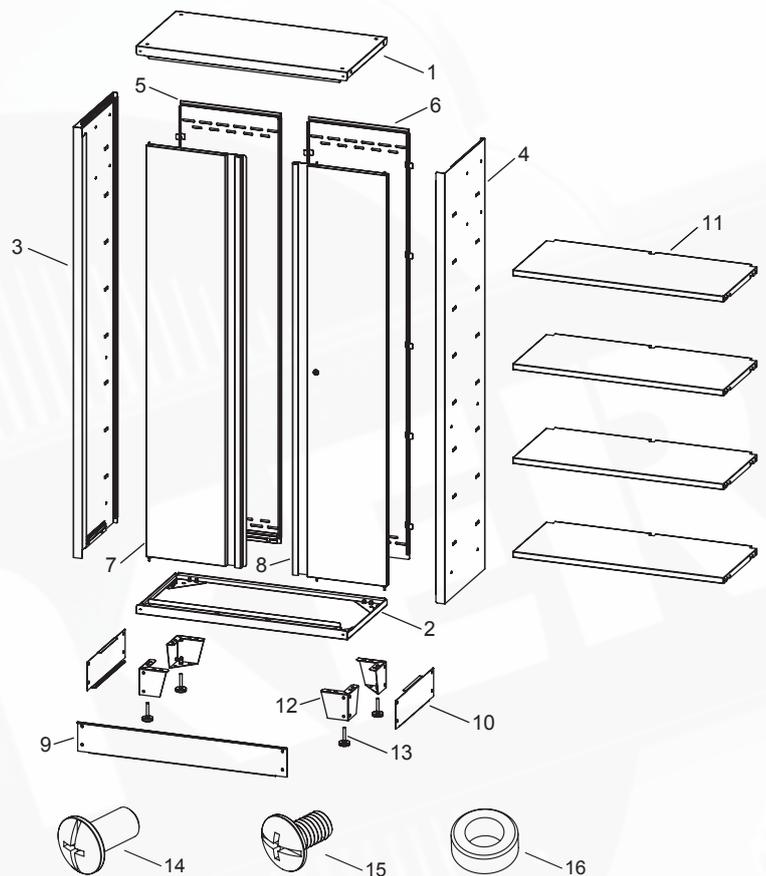

CABINET CONNECTION


Connect the side panels of two cabinets with (4) bolt M6 x 16mm and nut M6, and tighten with phillips screwdriver (not included).

Note: remove the drawers and open the doors before cabinet connection.

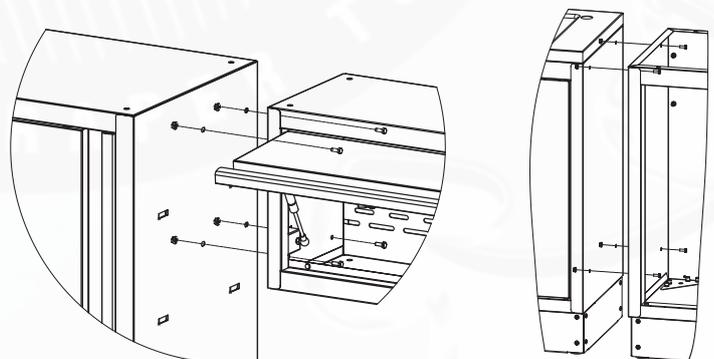



STEP 1:

Place the left back panel (item 5) and right back panel (item 6) together on a level surface. Attach right back panel to left back panel by engaging the holes on the left back panels with the corresponding hooks on right back panel.

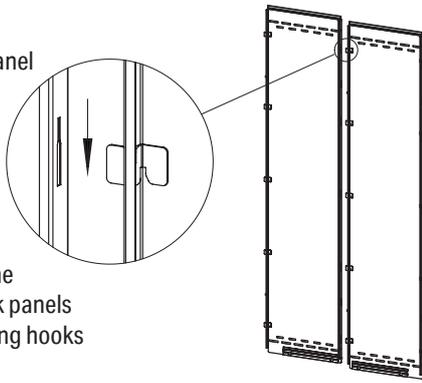


STEP 2:

Attach left and right back panels to left and right side panels (item 3 and 4) by engaging the holes on the side panels with the corresponding hooks on back panels.

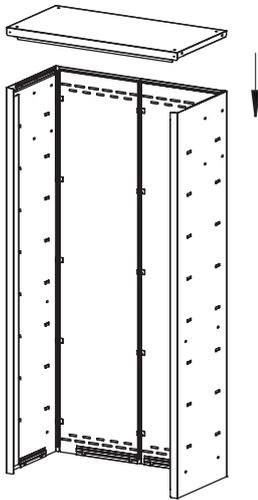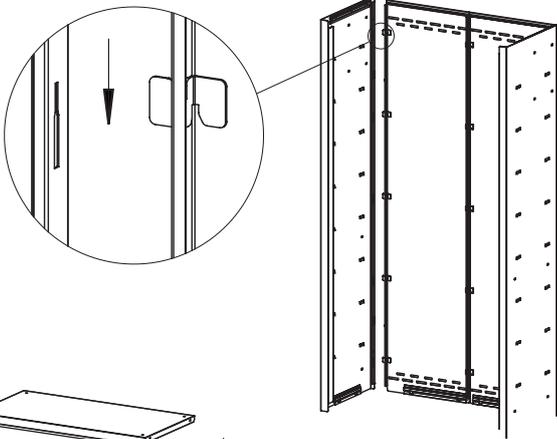


STEP 3:

Insert the top panel (item 1) into the side and back panels. Lay the cabinet flat on the ground if necessary.

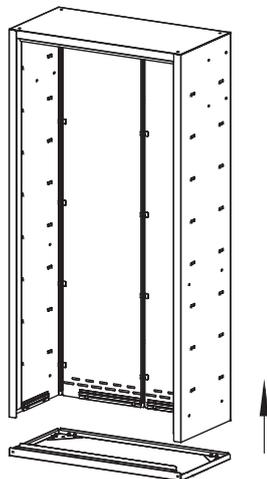


STEP 4:

Insert the bottom panel (item 2) into the side and back panels. Lay the cabinet flat on the ground if necessary.

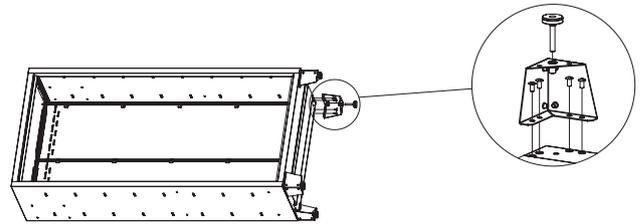

STEP 5:

Use packaging material to protect the unit. Attach the leg leveller (item 13) to foot holder (item 12). Insert bolt M8 x 16mm (item 14) through the foot holder into the cabinet.


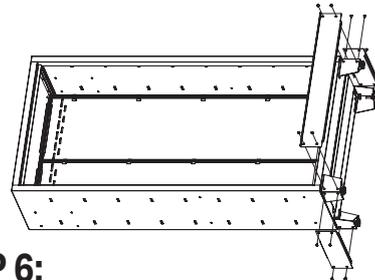


STEP 6:

Attach the front and side kick panel (item 9 and 10) to foot holder with bolt M6 x 16mm (item 15).

STEP 7:

Obliquely place the four shelf panels (item 11) in the cabinet, secure the shelf panels at four desired heights by carefully inserting the shelf edges into the flanges on left and right side panels. Make sure each shelf is level.

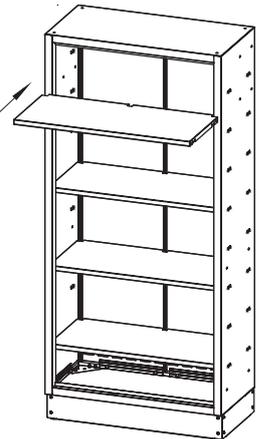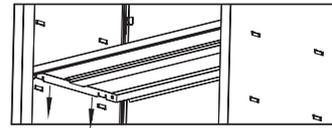

STEP 8:

Place the flat washer (item 16) into the hinge pin, align the hinge pin on the bottom of the door with the hole on bottom panel, slowly and carefully insert the hinge pin into the hole. Align the hinge pin on the top of the door with the hole on top panel, slowly and carefully insert the hinge pin into the hole. Repeat the step above to complete the right door assembly.

